METALTECH®

JOBSITE SERIES 5′

MODEL: **I-IMIS**

OPERATIONAL SAFETY AND ASSEMBLY INSTRUCTIONS

Picture may differ from actual product

READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT. KEEP THIS MANUAL HANDY FOR FUTURE REFERENCE.

2 YEAR WARRANTY

OSHA CONFORMANCE TO 29 CFR Pt. 1926

ANSI MEETS CODE A10.8

CSA CONFORMITY TO CSA STANDARD

Customer Service: 1 800 363-7587

Our customer service staff is available to help you. For help with product assembly, to report damaged or missing parts, or for any other information about this product, please call our toll-free number.

KEEP THIS MANUAL FOR FUTURE REFERENCE
Keep this manual and the original sales invoice in a safe, dry place for future reference.

Two-Year Limited Warranty

Metaltech-Omega Inc. guarantees this product against any material defect. Please return this product, freight prepaid, to Metaltech-Omega Inc. At its own discretion, Metaltech-Omega Inc. will replace or repair this product and return it within a reasonable time. This warranty does not cover any damage(s) caused by any incorrect or inappropriate use, care or maintenance. Proof of purchase must accompany the return.

METALTECH®
WWW.METALTECH.INFO
1 800 363-7587
LAVAL, QUEBEC, CANADA H7L 3N6

DESIGNED IN CANADA

Metaltech is a registered trademark of Metaltech-Omega inc.
DESIGNED IN CANADA / MADE IN CHINA

IN-IMIS-NA-EN04

OPERATIONAL SAFETY

READ BEFORE BEGINNING ASSEMBLY.

FAILURE TO UNDERSTAND AND FOLLOW ALL SAFETY RULES AND ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

METAL CONDUCTS ELECTRICITY:
Do not use this equipment where contact may be made with power lines or other live electrical circuits.

DO NOT OVERLOAD:
This scaffolding is designed to support a maximum load of 900 lb (408 kg)
Per platform: 450 lb (204 kg) / Step bar: 250 lb (113.5 kg) / Tool shelf: 35 lb (16 kg)

OPERATION AND SAFETY

- Inspect before use. Do not use if damaged. Check for missing parts.
- Examine thoroughly to make sure unit is set up properly.
- Always use casters and outriggers secured to the structure with the locking pins.
- Always use the safety rail secured to the structure with the spring-lock engaged in the scaffold structure.
- Do not climb unless the 4 casters are in locked position.
- Erect to be plumb on firm and level surface.
- This scaffold must be used on a firm surface that is free of pits, debris, holes or obstructions.
- Never place anything under or attach anything to this scaffold to increase height or to adjust to uneven surfaces.
- Acids are corrosive and can seriously affect strength. Do not expose this scaffold to corrosive substances.
- Keep scaffold free of debris and unnecessary equipment.
- Always keep body centered inside structure of scaffold.
- Remove or fasten all tools, material or equipment before moving. Use extra caution when moving to avoid tipping.
- Never try moving this scaffold while standing on it.
- Never move a scaffold with worker within.
- Do not use powered devices to propel this scaffold. Use extra caution near operating machinery.
- Do not use if the surface is not firm and level.
- Do not use in inclement weather or high winds.
- Maintain a firm grip while climbing.
- Do not step or stand on the tool shelf.
- Always ensure that the tool shelf is locked before using it.
- Do not modify the scaffold or any of its components.
- This scaffold is designed to be used by one person only.
- Do not use the scaffold as a footbridge.

ALWAYS INSPECT BEFORE USE

ALWAYS LOCK THE FOUR CASTERS BEFORE CLIMBING

THIS SCAFFOLD IS DESIGNED TO BE USED BY ONE PERSON ONLY

SCAFFOLD MAXIMUM LOAD CAPACITY:
900 lb (408 kg)
450 lb PER PLATFORM (204 kg)

TOOL SHELF MAXIMUM LOAD CAPACITY:
35 lb (16 kg)

METAL CONDUCTS ELECTRICTY

ACIDS ARE CORROSIVE. DO NOT EXPOSE UNIT TO CORROSIVE SUBSTANCES

ALWAYS KEEP BODY CENTERED INSIDE STRUCTURE OF UNIT

DO NOT USE IN INCLEMENT WEATHER OR HIGH WINDS

UNIT SHALL ONLY BE USED ON FIRM AND LEVEL SURFACES

NEVER TRY MOVING THE UNIT WHILE STANDING ON IT

ERECT ON FIRM AND LEVEL GROUND

NEVER PLACE ANYTHING UNDER OR ATTACH ANYTHING TO UNIT

DO NOT USE THE UNIT AS A FOOTBRIDGE

REMOVE OR FASTEN TOOLS, MATERIAL OR EQUIPMENT BEFORE MOVING. NEVER MOVE A SCAFFOLD WITH WORKER WITHIN.

ASSEMBLY INSTRUCTIONS

1. Insert both outriggers in the structure lower extremity to extend the height from 4’ to 5’ (122 cm à 152 cm). Secure outriggers with the locking-pins.
2. Insert casters in the outriggers or directly in the scaffold structure depending on step #1. Secure casters with locking-pins.
3. Unfold the structure.
4. Install the step bar and platforms at the desired height.
5. Install the safety rail. The spring-lock mechanism of the safety rail must be engaged in the scaffold structure.

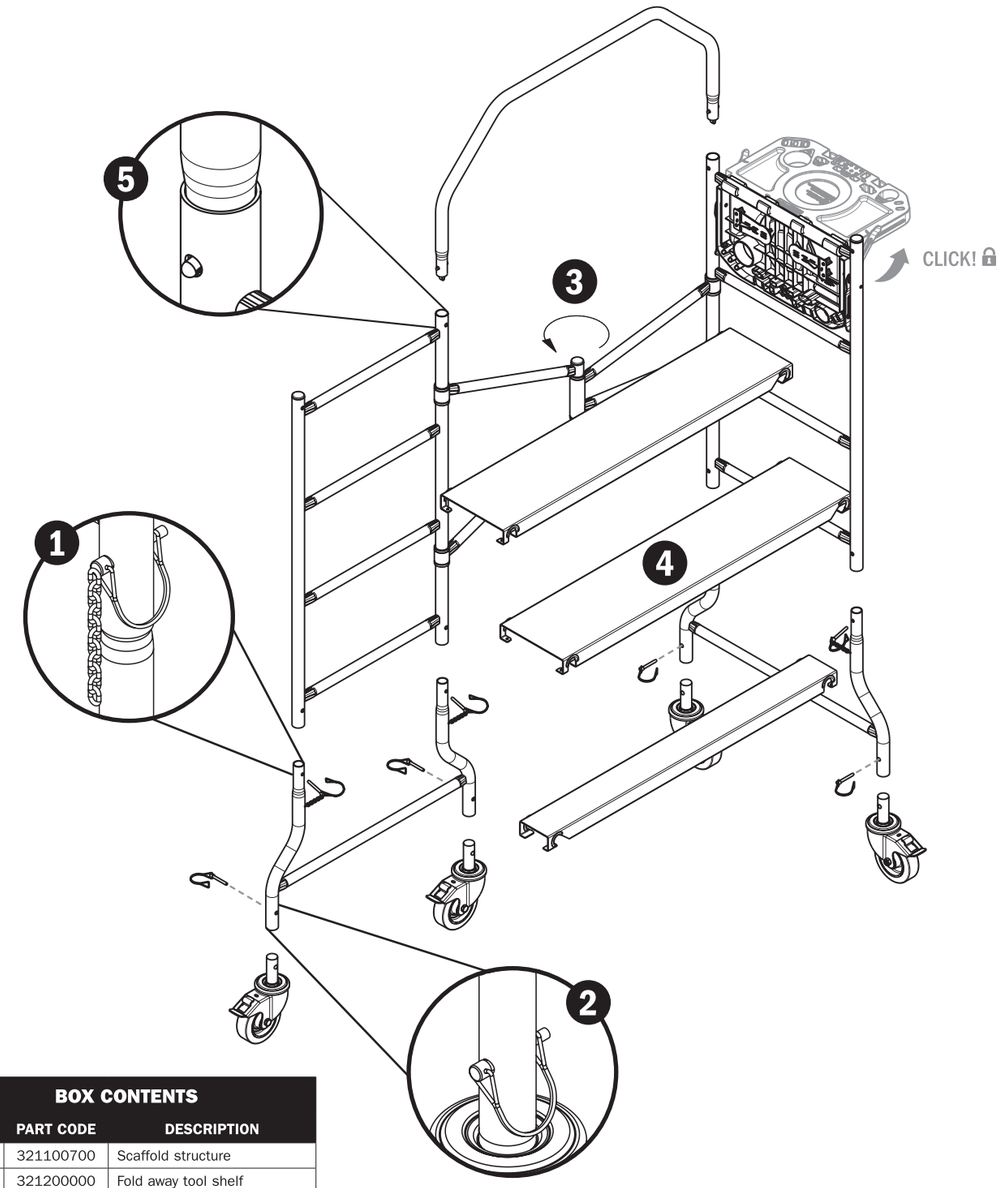

BOX CONTENTS		
QTY.	PART CODE	DESCRIPTION
1	321100700	Scaffold structure
1	321200000	Fold away tool shelf
2	321101400	Anti-slip platforms
1	321101500	Anti-slip step bar
1	321101200	Safety rail
2	321100600	Outriggers
4	I-ICW5	Casters
8	321101000	Locking-pins

THE *JOBSITE SERIES 5’* CAN BE USED AS A 4 ft (122 cm) HIGH SCAFFOLD WITHOUT OUTRIGGERS, OR 5 ft (152 cm) HIGH WITH OUTRIGGERS.